


POURING ESPRESSO 1 PAGER

BAD ESPRESSO

- Either under extracted - gushes out, thin and watery, pale or no crema, sour or sharp taste (under 27 seconds), or
- Over extracted - drips out slowly, dark crema, bitter / harsh (over 34 seconds)

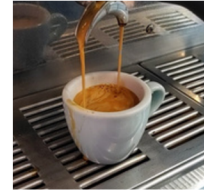

GOOD ESPRESSO

- Drips at first, starts pouring in about 6 seconds, pours nice and thin and within the 27-34 second range
- Thick velvety golden brown crema



STEP 1 - WEIGH GROUND COFFEE

Tare the portafilter on the scale to 0g, grind the coffee and weigh it. Remove some coffee with a tea spoon or add more coffee to get it to exactly 22g (don't adjust the grinder yet). Note make sure the hopper is full, if it's about to run out it will impact grind time.

STEP 2 - POUR ESPRESSO AND TIME IT

Pour the espresso shot and time it (from when you press the button, not from when you see coffee). The target time is 27-34 seconds.

STEP 3 - ADJUST THE GRIND COARSENESS

Adjust the coarseness on the grinder dial while grinding the next shot.

UNDER 27 SECONDS	27 - 34 SECONDS	OVER 34 SECONDS
Running too fast, adjust grinder finer.	Target range - no adjustment necessary	Running too slow, adjust grinder coarser.

Discard that coffee, because it will be partly the old grind coarseness and partly the new coarseness. Grind another one which will be all the new coarseness, pour that shot and time it. Keep repeating the process until the shot pours in the 27-34 second range.

STEP 4 - ADJUST TIMER ON GRINDER

Now you have the right coarseness, grind a shot and weigh it. If it's more than 22g, adjust the grinder dose time settings so it runs for less time. If it's more than 22g, adjust it so it runs for more time, so it gets to exactly 22g.

GRINDER PROGRAMMING

PROGRAMMING DOSE TIME FOR ON-DEMAND GRINDERS

COMPAK

- Select the dose button you would like to adjust (either 1,2, or 3) and then immediately press 'OK'.
- The screen should now be flashing the time in seconds.
- Use the 1 button to subtract time or the 3 button to add time.
- Press "OK" to complete.

MYTHOS

- Use the star * button to swap between dose. Either Dose 1 or Dose 2.
- Use the < and > buttons to either add time or subtract time.
- Tip - Use Dose 1 as your main recipe button and use Dose 2 for quick bursts to add coffee to your portafilter when Dose 1 short changes you.

MACAP

- Hold down the round silver button until it enters programming mode.
- Once you're in programming mode, use the round silver button as a dial to scroll between dosing programs.
- When you get to the program you want to change press the round silver button.
- It should now be highlighted or flashing. Use the round button as a dial to either subtract time or add time.
- Press the round silver button to confirm change.
- Scroll to the exit screen and press the button to exit.



If you have any questions, contact us here at East Coast Roast.

Text or call: 0494 190 800

Email: hello@eastcoastroast.com.au